

Central heating

Factory settings for the temperature levels

Weather-compensated operation

- Standard room temperature: 20 °C

Constant operation and room temperature-dependent operation

- Standard flow temperature: 60 °C

Constant operation and room temperature-dependent operation with room temperature controller

Only change the set values for the flow temperature if the heat supply for central heating is insufficient.



Room temperature-dependent operation with OpenTherm controller

In this operating mode, it is not possible to adjust temperatures via the control unit.

See the OpenTherm controller operating instructions.

Switching on the central heating

Tap the following buttons:

1.  repeatedly to switch between the default displays until  appears.

2.  for 4 s until  appears.



3. "OK" to confirm.


4.  to exit the menu.

Turning off central heating

You do not want to heat your rooms but you want to have DHW available (summer mode).

Tap the following buttons:

1.  repeatedly to switch between the default displays until  appears.

2.  for 4 s until  appears.

3. "OK" to confirm.

4.  to exit the menu.

Note

- To prevent the circulation pump from seizing, it briefly starts every 24 hours.
- Boiler frost protection is enabled.

Adjusting the temperature for central heating


Adjust the temperature for central heating to suit your needs.

Note

With room temperature-dependent operation, you adjust the set room temperature on your room temperature controller.

Tap the following buttons:

1.  until  appears.

2.  Select the set temperature

3. "OK" to confirm

4.  to exit the menu.

Adjusting the heating curve P_3

The heating curve can only be adjusted in weather-compensated operation.



By setting the heating curve, you influence the flow temperature provided by the heat generator.


 
DHW heating

Switching on DHW heating

You want to have DHW available.

Tap the following buttons:

1.  repeatedly to switch between the default displays until  appears.

2.  for 4 s until  appears.

3. "OK" to confirm.

4.  to exit the menu.

Adjusting the temperature for DHW heating



Factory settings: 50 °C



Adjust the DHW temperature to suit your needs.

Note


For reasons of good hygiene, you should not set the DHW temperature lower than 50 °C.

Tap the following buttons:

1.  until  appears.

2.  /  Select the set temperature

3. "OK" to confirm

4.  to exit the menu.



Setting the Eco function for DHW heating

Note

This function is only possible in conjunction with an instantaneous water heater (combi boiler).


You can set the Eco function via default display .

Tap the following buttons:

1.  repeatedly to switch between the default displays until  appears.

2.  /  



3. "OK" to confirm

When  is illuminated on the far left, you have successfully switched on the Eco function.

Switching off DHW heating

You do not want to have DHW available.

Tap the following buttons:

1.  repeatedly to switch between the default displays until  appears.

2.  for 4 s until  appears.

3. "OK" to confirm.

4.  to exit the menu.